



# Nortel *ipView* Software Wallboard Setup and Operation Guide

*ipView* Setup and Operation Guide

---

Reporting for Call Center  
Release 2.2.1xx

**Document Number:** 200-0200-110

**Document Status:** Standard

**Document Version:** 8.02

**Part Code:** N0078077

**October 2005**

**NORTEL**  
NETWORKS

## **Copyright © Nortel Networks Limited 2005**

All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

## **Trademarks**

\*Nortel, Nortel Networks, Nortel (Logo), Nortel Networks (Logo), the Globemark, and This is the way, This is Nortel (Design mark), This is Nortel Networks (Design mark) are trademarks of Nortel Networks.

\*Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

## Table of Contents

<b>List of Figures.....</b>	<b>iv</b>
<b>How to Use this Guide .....</b>	<b>5</b>
Introduction.....	5
How this guide is organized .....	5
<b>System Overview.....</b>	<b>7</b>
Introduction.....	7
Overview .....	7
<i>ipView</i> Languages.....	7
PC requirements.....	8
Operating system compatibility.....	8
<b>Installing <i>ipView</i> .....</b>	<b>9</b>
Installation of the <i>ipView</i> Software Wallboard .....	9
Installing Nortel <i>ipView</i> Software Wallboard.....	9
<b>Using <i>ipView</i> .....</b>	<b>11</b>
Starting the <i>ipView</i> SoftBoard.....	11
Short View .....	12
Long View.....	13
Message View .....	14
Parameter View .....	15
History View.....	16
Summary View.....	17
Tooltray Icon.....	18
Re-play Summary .....	19
Configuration .....	19
About <i>ipView</i> .....	19
Close <i>ipView</i> .....	20
Shutting Down <i>ipView</i> .....	20
<b>Configuring <i>ipView</i>.....</b>	<b>22</b>
Introduction.....	22
Accessing the Configuration Property Pages.....	22
View Tab .....	22
View Options.....	23
Always On Top Options.....	23
Last Position Options .....	24
Graphing Tab.....	24
Trend Graph Colours .....	25
Summary Options .....	26
Echoing Tab .....	27
Data Echoing Options .....	28

**Index.....31**



---

## List of Figures

Figure 1: <i>ipView</i> Icon.....	11
Figure 2: <i>ipView</i> First-Time Startup .....	11
Figure 3: Typical <i>ipView</i> Display .....	12
Figure 4: Short View with a Tool Tip.....	12
Figure 5: Short View with a Parameter Value in Alarm.....	13
Figure 6: Right-Click Menu, Set Long View.....	13
Figure 7: Long View.....	14
Figure 8: Long View with a Parameter Value in Alarm.....	14
Figure 9: Short View with a Message View Window .....	15
Figure 10: Parameter View Window in Long View .....	16
Figure 11: History View with <i>ipView</i> in Short View.....	17
Figure 12: Display of Summary Graphs with <i>ipView</i> in Short View .....	18
Figure 13: Typical Tooltray Showing the <i>ipView</i> Icon .....	18
Figure 14: Tooltray Menu.....	19
Figure 15: Re-play Summary Submenu.....	19
Figure 16: <i>ipView</i> About Box .....	20
Figure 17: <i>ipView</i> Close Button .....	20
Figure 18: Confirm Close Dialog Box.....	21
Figure 19: Right-Click Menu, Configuration .....	22
Figure 20: Configuration View Tab.....	23
Figure 21: Configuration Graphing Tab .....	25
Figure 22: Color Palette Window .....	26
Figure 23: Configuration Echoing Tab.....	28
Figure 24: Configuration Echoing Tab with Data Echoing IP Address List .....	29

## Introduction

This guide is designed to assist a System Manager in the installation, set up, and operation of Nortel *ipView* Software Wallboards.

This chapter provides an overview of the document.

## How this guide is organized

The *Nortel ipView Software Wallboard Setup and Operation Guide* is organized according to the following chapters:

<b>How to Use this Guide</b>	Provides an overview of this guide.
<b>System Overview</b>	Describes the overall functionality of Nortel <i>ipView</i> and describes the minimum PC and operating system requirements of <i>ipView</i> . The chapter also describes the operating system compatibility of <i>ipView</i> .
<b>Installing <i>ipView</i></b>	Describes installation prerequisites and how to install Nortel <i>ipView</i> software.
<b>Using <i>ipView</i></b>	Describes starting to use Nortel <i>ipView</i> , including starting and closing <i>ipView</i> . This chapter also explains the different views within <i>ipView</i> .
<b>Configuring <i>ipView</i></b>	Describes how to configure <i>ipView</i> with your preferred operational settings.
<b>Index</b>	Provides a cross-reference of topics in this document.





### Introduction

Nortel *ipView* Software Wallboard is a Windows® software application that provides a software-based, IP-enabled wallboard on the PC desktop of Call Center agents.

Nortel *ipView* Software Wallboard is also referred to as the *ipView* SoftBoard.

### Overview

Call Center Statistics and Messages from the Nortel Networks Reporting for Call Center application are displayed in Real Time on the *ipView* SoftBoard.

Audible Alerts can be associated with certain events, and histograms can be displayed to graphically show the changes in a particular Call Center parameter over a rolling period of 15 minutes.

The *ipView* SoftBoard is completely compatible with the *ipView* hardware wallboard, and a mixture of *ipView* hardware wallboards and *ipView* SoftBoards can be configured within the Nortel Networks Reporting for Call Center application.

Additionally, *ipView* SoftBoards can relay their input to any number of other IP-enabled wallboards, either *ipView* hardware wallboards or *ipView* SoftBoards.



!	Online context-sensitive Help is available within <i>ipView</i> by pressing the F1 key.
---	---

### *ipView* Languages

You can operate the *ipView* SoftBoard in English, French, Spanish, Italian, or German.

You do not need to operate the *ipView* SoftBoard and the Nortel Networks Reporting for Call Center application in the same language. This flexibility allows you to install different language versions of the *ipView* SoftBoard among your Call Center agents.

For example, you can have your Nortel Networks Reporting for Call Center application operating in French and have a mixture of English-speaking and French-speaking agents. You can install a mixture of *ipView* SoftBoards, in English and French, among your Call Center agents, as appropriate.

In this example, the Nortel Networks Reporting for Call Center application transmits the wallboard statistics in French. The *ipView* SoftBoards, operating in English, locally translate the

received parameter abbreviations and long descriptions into English before displaying the abbreviations and descriptions to the agent.

## PC requirements

The PC requirements for *ipView* are as follows:

Component	Specification
Platform	IBM™ Compatible PC
Microprocessor	Pentium 1 (or equivalent) minimum
Microprocessor speed	200 MHz minimum
RAM	16 Mb minimum
Free hard disk space	2 Mb minimum
Network Interface	Network Interface Card
Network Protocol	TCP/IP protocol
Display Type	SVGA display
Display (Graphics) Card	SVGA graphics card

## Operating system compatibility

*ipView* has been verified for correct operation on the following operating systems:

Operating System	Version
Windows 95	4.00.950 B
Windows 98	4.10.2222 A
Windows Millennium Edition	4.9.3000
Windows NT	4.00.1381
Windows 2000	5.00.2195
Windows XP Professional	Version 2002

### Installation of the *ipView* Software Wallboard

You can install the *ipView* SoftBoard on any PC desktop that is connected by the network to the Nortel Networks Reporting for Call Center Web Host PC, with the TCP/IP protocol.

The *ipView* SoftBoard can operate in English, French, Spanish, Italian, or German. For more information, refer to *ipView* Languages.

### Installing Nortel *ipView* Software Wallboard

To install the *ipView* SoftBoard on an agent desktop, perform the following steps:

1. Exit any Windows programs that are running.
2. Start your internet browser (such as Internet Explorer or Netscape), and use it to connect to the Business Communications Manager, or CallPilot. In the browser Address bar, enter the IP address of the Business Communications Manager, or CallPilot, in the following format: `http://10.10.10.1`.

Substitute the IP address of your Business Communications Manager, or CallPilot, for the 10.10.10.1 shown in the format example.

The Nortel Element Manager page appears.

3. Click **Administrator Clients**.  
The Administrator Clients page appears.
4. In the **Call Center Applications:** list, click ***ipView* Client**.  
A new page that displays an *ipView* Client button appears.
5. Click the web link to download ***ipView***.
6. Click the **Install *ipView*** button.  
The Install *ipView* dialog box appears.
7. In the **Install *ipView*** dialog box, you can select to either **Run this program from its current location** or **Save this program to disk**. The default option is **Save this program to disk**. Click **OK**.

Several progress bars appear as the installation routine prepares to install, and then the Nortel *ipView* SoftBoard language selection dialog box appears.

8. Select the language you wish to install, and then click **OK**.  
The *ipView* startup page and the Welcome page appear.
9. In the **Choose Destination Location** dialog box, click **Next** to accept the default location.  
To change the folder location, click **Browse**, choose another folder location, and then click **Next**.
10. Select the language in which your copy of Nortel Networks Reporting for Call Center Master is running.



Note that the language in which your copy of the Nortel Networks Reporting for Call Center is operating is *not* the language in which you wish to operate *ipView*. You selected the language in which you wish to operate *ipView* in step 8. In step 10, you specify the language in which the Nortel Networks Reporting for Call Center Web Host PC sends data to your *ipView*. *ipView* can then translate the data, if required, into the language you selected in step 8.

11. When the installation is complete, the **Setup Complete** window appears.

## Using ipView

## 4

Configure Nortel Networks Reporting for Call Center to operate with *ipView* the same way that you configure Nortel Networks Reporting for Call Center to operate with a hardware wallboard. For information about setting up a hardware wallboard, refer to the *Nortel Networks Reporting for Call Center Setup and Operation Guide*.

### Starting the ipView SoftBoard

Follow the steps in this section to start the *ipView* SoftBoard.

1. Double-click the *ipView* icon on the PC desktop. See Figure 1: ipView Icon.




Figure 1: ipView Icon

The *ipView* window appears. The first time you start *ipView*, it opens in the default Short View. See Figure 2: ipView First-Time Startup. The first-time startup view does not show parameters or statistics until *ipView* receives data from Nortel Networks Reporting for Call Center or another *ipView* SoftBoard that is echoing to yours.



Figure 2: ipView First-Time Startup


	<p>Note that each time you start <i>ipView</i>, the parameter values are blank until <i>ipView</i> receives data from Nortel Networks Reporting for Call Center or another <i>ipView</i> SoftBoard that is echoing to yours. (For information about echoing, see Echoing Tab.)</p>
---	--

If the IP address of your copy of *ipView* is configured in the Wallboards Tab of the Nortel Networks Reporting for Call Center Configuration and the Nortel Networks Reporting for Call Center application is operational, *ipView* starts to display information.

The information that *ipView* receives depends on the configuration by the System Manager of the Nortel Networks Reporting for Call Center application. Figure 3: Typical *ipView* Display shows a typical *ipView* display.

## Short View


When you first start to use *ipView*, the parameters are displayed as two-letter abbreviations known as Short View. See Figure 3: Typical *ipView* Display.

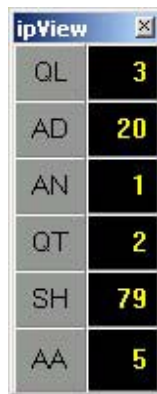

Parameter	Value
QL	3
AD	20
AN	1
QT	2
SH	79
AA	5

Figure 3: Typical *ipView* Display

To view a tool tip that expands the parameter abbreviations, point to an abbreviation. See Figure 4: Short View with a Tool Tip.

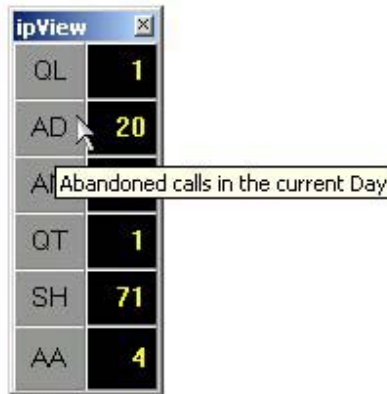

Parameter	Value
QL	1
AD	20
AI	Abandoned calls in the current Day
QT	1
SH	71
AA	4


Figure 4: Short View with a Tool Tip

If the System Manager of the Nortel Networks Reporting for Call Center sets a threshold for any parameters displayed on your copy of *ipView* and one of those parameters exceeds the threshold, the parameter value appears in blinking red.

In the view shown in

Figure 5: Short View with a Parameter Value in Alarm, a call in the queue has exceeded the time threshold set by the System Manager. The parameter is said to be in the alarm state.

If configured by the System Manager, audible alerts might be associated with the alarm. Refer to Sound Options.

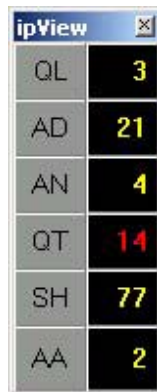

Parameter	Value
QL	3
AD	21
AN	4
QT	14
SH	77
AA	2

Figure 5: Short View with a Parameter Value in Alarm

## Long View

In Long View, you see full parameter descriptions instead of the two-letter abbreviations in Short View.

When you first start to use *ipView*, you may want to use the Long View until you become familiar with the parameters sent from the Nortel Networks Reporting for Call Center.

To select Long View, right-click in the *ipView* window. The menu shown in Figure 6: Right-Click Menu, Set Long View appears.


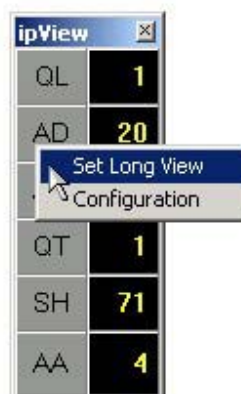 


Figure 6: Right-Click Menu, Set Long View


Select **Set Long View** to adjust the *ipView* to Long View. Figure 7: Long View shows the Long View full parameter descriptions.

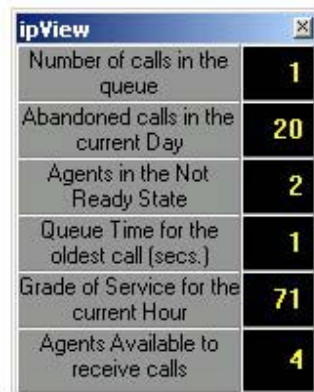

ipView	
Number of calls in the queue	1
Abandoned calls in the current Day	20
Agents in the Not Ready State	2
Queue Time for the oldest call (secs.)	1
Grade of Service for the current Hour	71
Agents Available to receive calls	4

**Figure 7: Long View**

Parameter values in alarm are displayed the same in Long View and Short View. See Figure 8: Long View with a Parameter Value in Alarm.

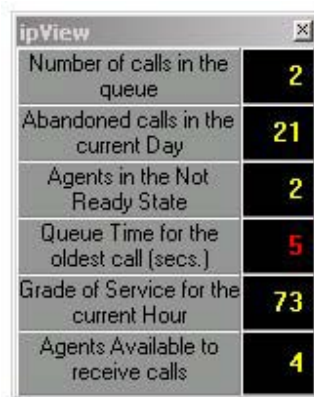

ipView	
Number of calls in the queue	2
Abandoned calls in the current Day	21
Agents in the Not Ready State	2
Queue Time for the oldest call (secs.)	5
Grade of Service for the current Hour	73
Agents Available to receive calls	4

**Figure 8: Long View with a Parameter Value in Alarm**

## Message View

If Nortel Networks Reporting for Call Center sends a message to the *ipView* SoftBoard, the message appears in the Message View window. See Figure 9: Short View with a Message View Window. Message View windows appear whether *ipView* is in Short View or Long View.





**Figure 9: Short View with a Message View Window**

The Nortel Networks Reporting for Call Center sends messages when:

- A parameter goes into the alarm state and has a message associated with it.
- A message is scheduled to be sent.
- The System Manager or Skillset Supervisor manually sends a message.

The Message View window closes automatically when the message has been displayed for a couple of seconds up to about 20 seconds depending on the length of the message. If a threshold had been set for a particular parameter, the Message View window will display the message for as long as the threshold condition is valid.

## Parameter View

The Parameter View window displays the current value of a selected parameter. The Parameter View displays the selected parameter value in a large font so that an agent can easily monitor the current parameter value. To activate the Parameter View window, click one of the *ipView* parameter values (not the abbreviation or description).

Figure 10: Parameter View Window in Long View shows the Parameter View window with *ipView* in Long View. You can activate the Parameter View window in either Long View or Short View.

ipView		Parameter View
Number of calls in the queue	2	Agents in the Not Ready State
Abandoned calls in the current Day	21	
Agents in the Not Ready State	3	
Queue Time for the oldest call (secs.)	3	3
Grade of Service for the current Hour	78	
Agents Available to receive calls	3	

Figure 10: Parameter View Window in Long View

To close the Parameter View window, click the selected parameter value.

You can change the displayed parameter without closing the Parameter View window. To display a different parameter in the Parameter View window, click the new parameter value.

!	Note that, when you open the Parameter View window, the window is blank until the selected parameter value is updated.
---	--

## History View

The History View window displays an historical trend graph of a selected *ipView* parameter so that an agent can see the current trend for the parameter. To activate the History View window, click one of the *ipView* parameter abbreviations or descriptions.

In the History View window, a column represents the minimum and maximum values of the selected parameter for each minute, for up to 15 minutes.

As a minute passes, a new column appears at the right end of the graph. Each new column represents the minute that most recently ended. Previous columns move to the left to accommodate new columns.

Figure 11: History View with *ipView* in Short View shows the History View window with *ipView* in Short View. You can activate the History View window in either Long View or Short View.

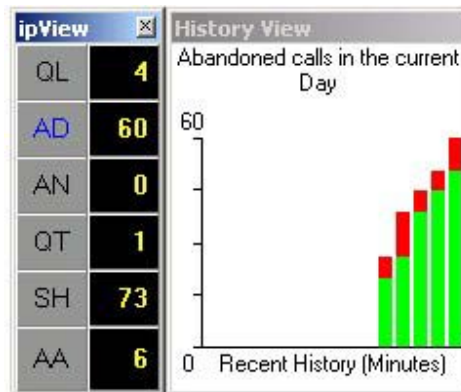 


Figure 11: History View with *ipView* in Short View

To close the History View window, click the selected parameter abbreviation or description.

You can change the displayed parameter history without closing the History View window. To display a different parameter trend in the History View window, click the new parameter abbreviation or description.

## Summary View

When the Nortel Networks Reporting for Call Center application sends a summary to the wallboards, it sends the daily and hourly totals for the following four parameters:

- Incoming Calls
- Outgoing Calls
- Abandoned Calls
- Grade of Service

When *ipView* receives a summary, it stores the hourly values. When *ipView* receives subsequent summaries, it can display a series of four graphs that show the trend of daily values for each of the four parameters.

Figure 12: Display of Summary Graphs with *ipView* in Short View shows a series of the various displayed graphs. Only one graph is displayed at a time. After a couple of seconds, the displayed graph is replaced by the next one.

The Summary View window appears whenever a summary is received from the Nortel Networks Reporting for Call Center application, whether *ipView* is in Long View or Short View.

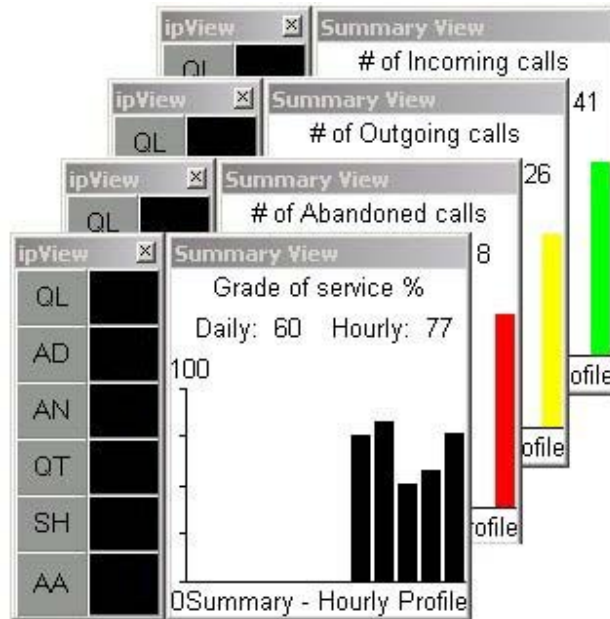 


Figure 12: Display of Summary Graphs with *ipView* in Short View

After the final graph is displayed, the Summary View window closes automatically.

**!** Note that the parameter values are removed for the duration of the display of the Summary Graphs. The values are re-displayed when the summary completes.

## Tooltray Icon

When *ipView* is running, an *ipView* icon appears in the tooltray at the bottom right corner of the PC desktop. See

Figure 13: Typical Tooltray Showing the *ipView* Icon.



Figure 13: Typical Tooltray Showing the *ipView* Icon

Right-click the *ipView* tooltray icon to display the menu shown in Figure 14: Tooltray Menu.



Figure 14: Tooltray Menu

## Re-play Summary

Select **Re-play Summary** to display the Re-play Summary submenu shown in Figure 15: Re-play Summary Submenu.

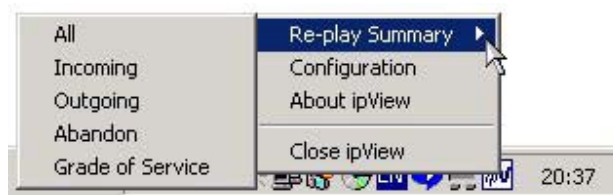 


Figure 15: Re-play Summary Submenu


The Re-play Summary submenu options allow you to re-play the most recently received summary. You can select **All** to re-play all the graphs, or select to re-play a single **Incoming**, **Outgoing**, **Abandoned**, or **Grade of Service** graph. You can also specify the amount of time that the summaries are displayed. See Re-play Duration.

## Configuration

Select **Configuration** to access the *ipView* Configuration Property Pages. For more information about Configuration Property Pages, refer to *Configuring ipView*.

## About *ipView*

Select **About *ipView*** to display the **About *ipView*** dialog box. See Figure 16: *ipView* About Box. The details of your version of *ipView* may differ slightly than those shown in the figure.

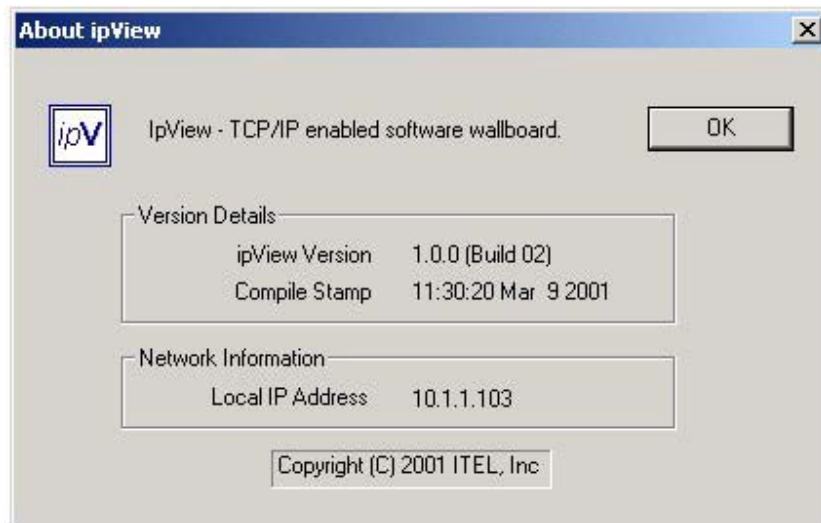 Figure 16: *ipView* About Box

<b>!</b>	The <i>ipView</i> About box provides a quick way to view your IP Address.
----------	---

### Close *ipView*

Select **Close *ipView*** to shut down *ipView*. You can also shut down *ipView* by clicking the **Close** button in the top right corner of the *ipView* window.

### Shutting Down *ipView*

To shut down *ipView*, click the Close button in the top right corner of the *ipView* window, as shown in Figure 17: *ipView* Close Button.

Figure 17: *ipView* Close Button

After you click the Close button, a **Confirm Close** dialog box appears. See Figure 18: Confirm Close Dialog Box.



**Figure 18: Confirm Close Dialog Box**

Click **OK** to close *ipView*, or click **Cancel** to leave *ipView* running.

## Configuring *ipView*

## 5

### Introduction

Many *ipView* properties can be changed or customized, and *ipView* saves the settings and uses them the next time it starts. You change or customize settings and options in the *ipView* Configuration Property Pages.

### Accessing the Configuration Property Pages

To access the **Configuration Property Pages**, right-click in the *ipView* window. The menu shown in Figure 19: Right-Click Menu, Configuration appears.

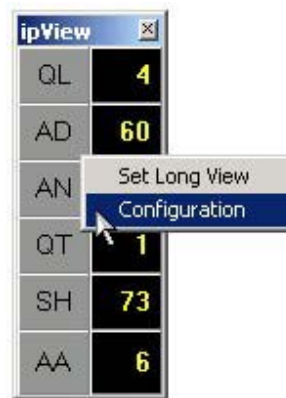 


Figure 19: Right-Click Menu, Configuration

Select **Configuration** to view the *ipView* Configuration Property Pages. The three tabs in the *ipView* Configuration Property Pages are as follows:

- View
- Graphing
- Echoing

### View Tab

The View tab displays the options that relate to the appearance and position of *ipView* on the PC desktop. See Figure 20: Configuration View Tab.



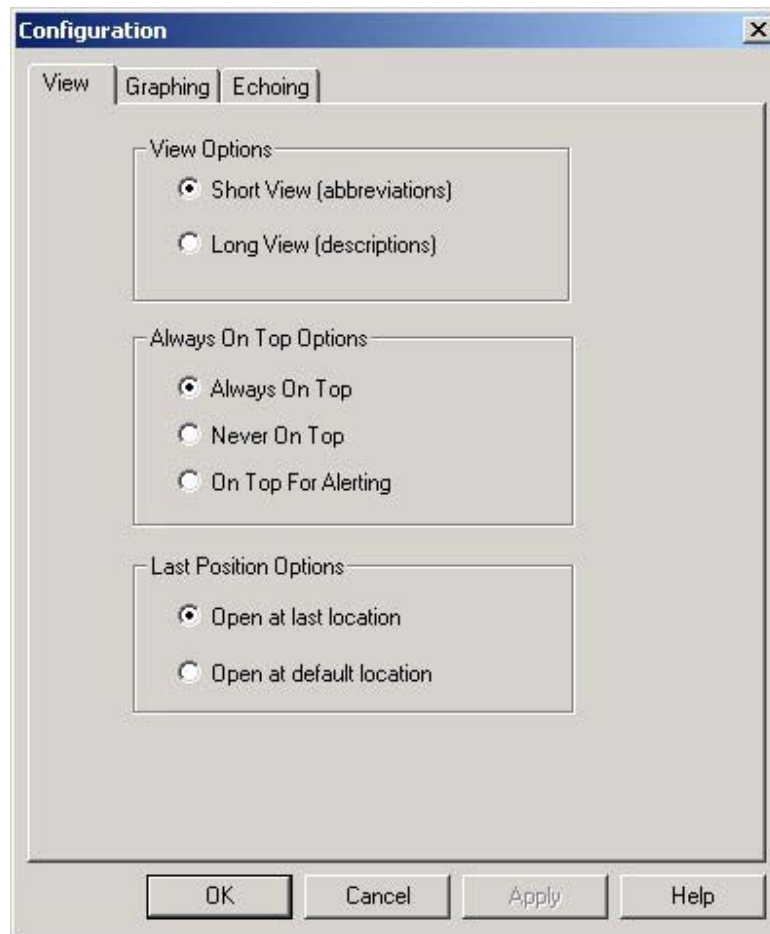 


Figure 20: Configuration View Tab

### View Options

You can view *ipView* in Short View or Long View.

In Short View, two-letter abbreviations represent the parameters. In Long View, more complete text descriptions represent the parameters.

Most users start by using Long View until they become familiar with the parameters. Then they change to Short View, which occupies less screen area.

To have *ipView* start up in the Short View, click **Short View**.

To have *ipView* start up in the Long View, click **Long View**.

### Always On Top Options

When several programs are running on your desktop, the program windows overlap. Only a portion of some windows are visible because other windows are 'in front' or 'on top' of them. Some smaller programs may be completely obscured by other larger windows.

You can specify the position of *ipView* with respect to the windows of other programs. The options are **Always On Top**, **Never On Top**, and **On Top For Alerting**.

#### **Always On Top**

When you select **Always on Top**, the *ipView* window is always visible. It stays in front of all other application windows, even when another application is the currently active window. You can see the *ipView* window even if you are using a full-screen application.

#### **Never On Top**

When you select **Never On Top**, the *ipView* window is visible only when no other applications or windows are opened on top or in front of it.

#### **On Top For Alerting**

The **On Top For Alerting** option is similar to the **Never On Top** option. However, if *ipView* receives either a text message or a summary, or if a parameter goes into the Alarm state, the *ipView* window appears in the front so that you can see it.

Using another application causes that application window to again appear in front of the *ipView* window.

#### **Last Position Options**

You can configure *ipView* to start up at either its default location (top-right on the desktop) or at the screen position that was in use when *ipView* was previously closed down.

To have *ipView* start up at its last screen location, click **Open at last location**.

To have *ipView* start up in the default location, click **Open at default location**.

### **Graphing Tab**

The Graphing tab displays the options that relate to *ipViews* graphs and sounds. Figure 21: Configuration Graphing Tab shows the Graphing tab.

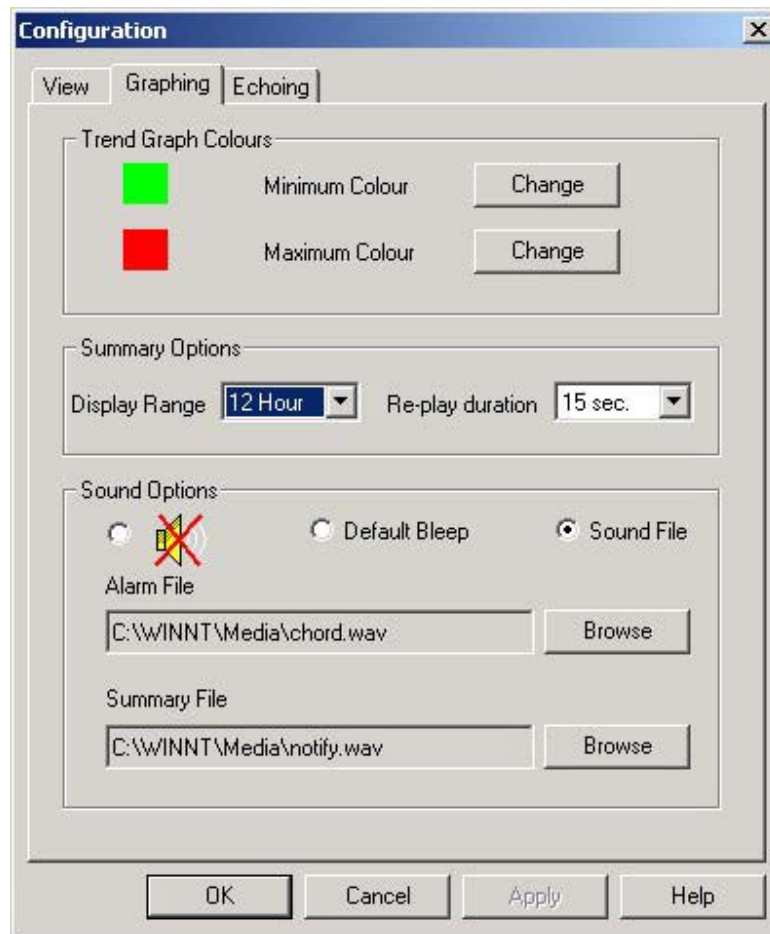 


Figure 21: Configuration Graphing Tab

### Trend Graph Colours

You can define the colours used in Minimum and Maximum portions of the History View trend graph. The tab shows the current colours.

To specify the colour for the Minimum portion of the trend graph, click the **Change** button beside the Minimum Colour option. A Color Palette window opens up, see Figure 22: Color Palette Window. You can select a colour of your choice and click the **OK** button. For the change to take place click **OK** on the Graphing tab.



**Figure 22: Color Palette Window**

To specify the colour used for the Maximum portion of the trend graph, click the **Change** button beside the Maximum Colour option. A Color Palette window opens up, see Figure 22: Color Palette Window. You can select a colour of your choice and click the **OK** button. For the change to take place click **OK** on the Graphing tab.

## Summary Options

Summary options allow you to specify the summary Display Range and Re-play Duration.

### Display Range

Summaries can be configured to show the previous 12 hours or the previous 24 hours. Select either **12 Hour** or **24 Hour** from the **Display Range** list.

### Re-play Duration


You can re-play the most recent summary by right-clicking the *ipView* icon in the tooltray and selecting the **Re-play Summary** option. For more information, refer to Re-play Summary.

When you select **Re-play All**, the Incoming, Outgoing, Abandoned, and Grade of Service summaries display in turn.

You can specify the amount of time that each of these summaries displays by selecting **10 sec**, **15 sec**, **20 sec**, **25 sec**, or **30 sec** from the **Re-play Duration** list.

### Sound Options


When a parameter enters an alarm state or a Summary is received, *ipView* can provide an audible alert.

	Note that the audible alert depends on the System Manager configuration of the Nortel Networks Reporting for Call Center application. You cannot receive audible alerts unless this option is configured by the System Manager.
---	---

If audible alerts are configured, you can specify whether the alert is a simple default bleep or a sound file (.WAV). Different (or the same) sound files can be played for Alarm alerts and Summary alerts.

You can also turn off audible alerts by selecting the crossed speaker icon.

To specify whether to play the default bleep or a sound file, click either **Default Bleep** or **Sound File**.

	<p>Note that the way your PC reacts to the default bleep depends on the way your Sounds are mapped within your PC. For example, Microsoft Themes may re-map your sounds so that the default bleep is inaudible. If you cannot hear the default bleep, use the Sounds option in Control Panel to map the default system sound to a file that is audible on your PC.</p> <p>The sound of the default bleep also depends on whether your PC is configured with an internal speaker or a ceramic buzzer. On some PCs, the default bleep is a click. In these circumstances, playing a sound file is preferable.</p>
---	---

If you select the **Sound File** option, the **Alarm File** and **Summary File Browse** buttons become active. The buttons become inactive if you select the **Default Bleep** option.

When the Sound File option is selected, use the **Browse** buttons to browse your hard disk to select a sound file (.WAV) to use as the Alarm or Summary audible alert.

## Echoing Tab

The *ipView* running on one computer can be configured to send any information it receives to other copies of *ipView* running on other computers, or to *ipView* physical (hardware) wallboards. This sending of information is called echoing.

You can send information, or echo, to any number of copies of *ipView* (or *ipView* physical wallboards).

The Echoing tab displays the options that control the echoing of received data to other wallboards.

Figure 23: Configuration Echoing Tab shows the Echoing tab.

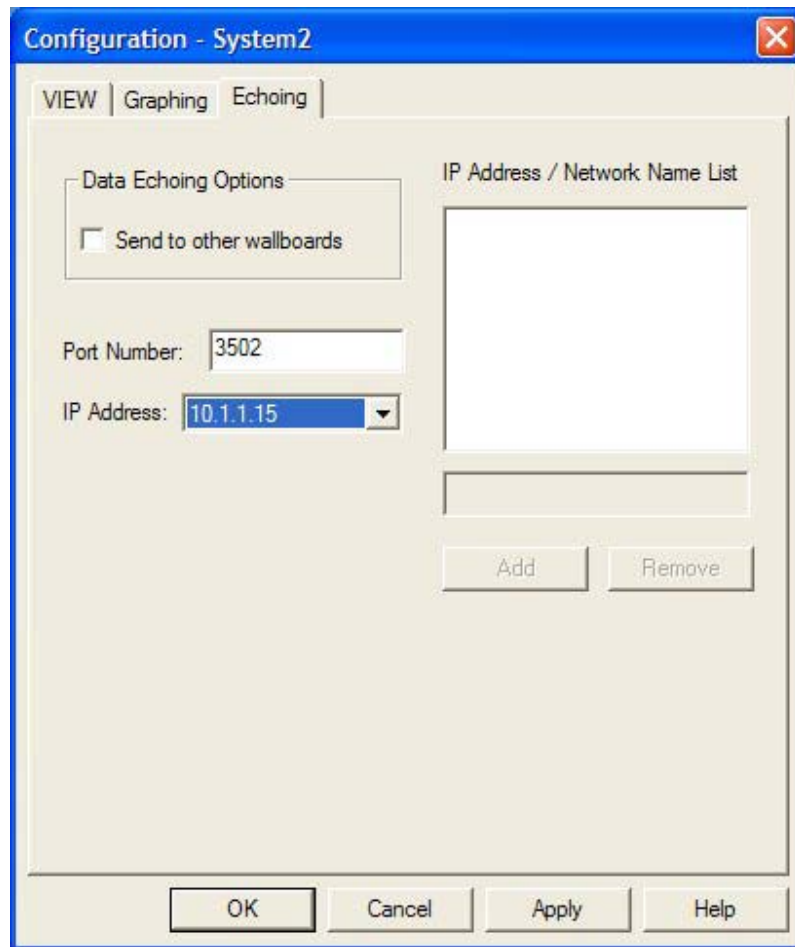 


Figure 23: Configuration Echoing Tab

## Data Echoing Options

To configure *ipView* to echo to other wallboards, select **Send to other wallboards**. (When this option is selected, the **Data Echoing IP Address List** and its **Add** and **Remove** buttons become active.)

### Port Number

The Port number is the number of the port that *ipView* uses to listen for incoming data and to echo to other wallboards. Normally, you do not need to change this value. You may need to change the value, however, to address wallboards on the other side of a firewall and your network administrator specifies a range of Port numbers that must be used to communicate through the firewall.

If your network administrator advises you to change your Port number to a new value, overtype the old value and click **Apply**.

You must close down and restart *ipView* before the new setting take effect.

### IP Address

Use the IP Address list to choose a network interface card (IP Address) on which you wish *ipView* to listen. If you have only a single network interface card in your PC, then select the single IP Address in the list.

### Data Echoing IP Address List

The Data Echoing IP Address list, see Figure 24: Configuration Echoing Tab with Data Echoing IP Address List, displays the IP addresses or network machine names (PC Names) to which you want *ipView* to echo.

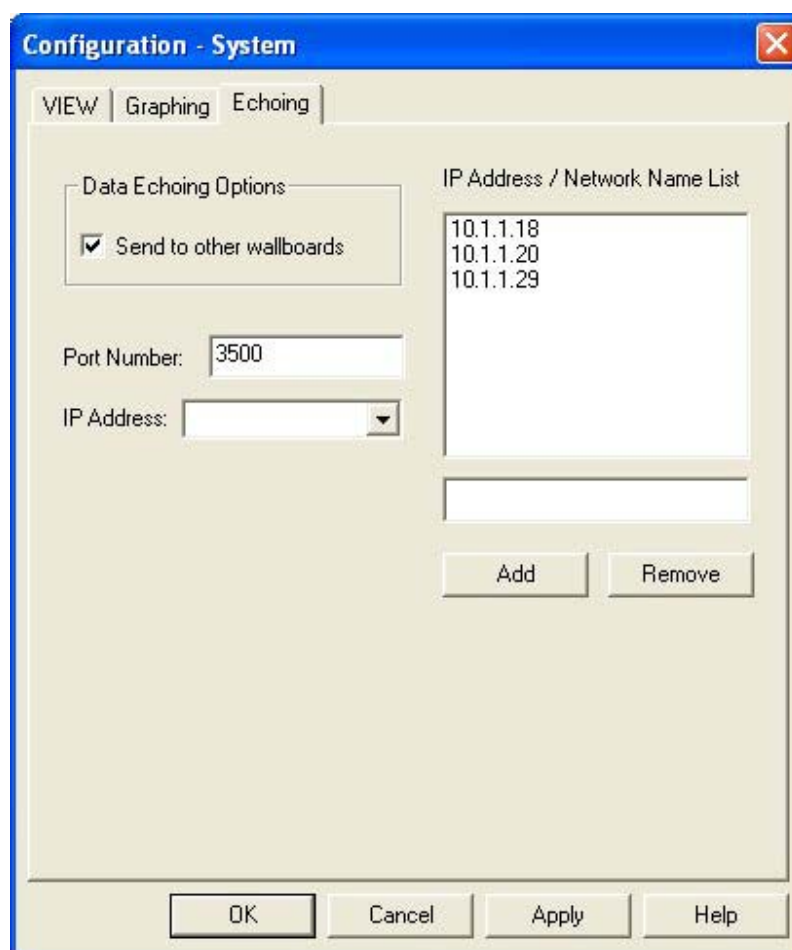 




Figure 24: Configuration Echoing Tab with Data Echoing IP Address List

To add a new entry to the list, select the **Send to other wallboards** option under **Data Echoing Options**, see Figure 24: Configuration Echoing Tab with Data Echoing IP Address List. Type the IP address or network name in the box above the **Add** and **Remove** buttons, and then click **Add**. To remove an entry from the list, select the entry in the list, and then click **Remove**.

	Note that if you want to turn echoing off, you do not need to remove all the entries from the list. To turn echoing off, clear the <b>Send to other wallboards</b> checkbox.
---	--

Note that *ipView* is set up so that the IP Addresses in the Data Echoing IP Address List remain constant. If the addresses are altered, the Data Echoing IP Address List should be adjusted to match. This adjustment requires manual intervention on a physical Wallboard. However, if the Wallboard that is being echoed to is an *ipView* Software wallboard running on a PC that uses DHCP to obtain its IP Address, then the IP Address of the PC could be subject to change. DHCP-enabled PCs usually receive the same IP Address each time they restart. However, if the PC has been turned off for a period in excess of the IP Address lease time for your network and the IP Address has been allocated to another PC, the PC receives a new IP Address.

Nortel recommends that you use the network machine name instead of the IP Address of PCs that are using DHCP to obtain their IP Addresses.

	If the IP Address of a physical Wallboard or an <i>ipView</i> Software Wallboard changes, the Data Echoing IP Address List must be updated to reflect the new IP Address of the Wallboard device.
--	---



## Index

.WAV sound files, 27

### A

About ipView, 19, 20  
 Alarm Sound File, 27  
 Alarm State, 12, 15, 24, 26  
 Always On Top, 23, 24  
 Audible Alert, 7, 26, 27  
 Audible Alerts - turning off, 27

### C

Configuration Property Pages, 19, 22  
 Configuring ipView, 19, 22, 24  
 Configuring Nortel Networks Reporting for  
 Call Center, 11, 27  
 Confirm Close Dialog, 20

### D

Data Echoing, 27, 28, 29  
 Default Bleep, 27  
 DHCP, 30  
 Display Range, 26

### E

Echoing Tab, 22, 27, 28

### G

Graphing Tab, 22, 24  
 Graphs, 17, 19, 24

### H

History View, 16, 17, 25  
 How this guide is organized, 5  
 How to use this guide, iv, 5

### I

Installing ipView, 5, 7, 9  
 Introduction, 5  
 IP Address, 11, 20, 28, 29

### L

Languages, 7, 9, 10  
 Long View, 13, 14, 15, 16, 17, 23

### M

Maximum Colour, 26  
 Message View, 14, 15  
 Minimum Colour, 25

### N

Never On Top, 24  
 Nortel Networks Reporting for Call Center,  
 7, 9, 11, 12, 13, 15, 17, 27  
*Nortel Networks Reporting for Call Center  
 Setup and Operation Guide*, 11

### O

On Top For Alerting, 24  
 On-Line Help, 7  
 Open at default location, 24  
 Open at last location, 24  
 Operating System Compatibility, 8

### P

Parameter Abbreviations, 8, 12, 13, 16, 23  
 Parameter Descriptions, 8, 13, 16, 23  
 Parameter View, 15, 16  
 PC Requirements, 8

### R

Re-play Duration, 26  
 Re-play Summary, 19, 26  
 Right-Click Menu, 13, 22

### S

Short View, 11, 14, 15, 16, 17, 23  
 Shutting Down ipView, 20  
 Starting ipView, 11  
 Summary Sound File, 27  
 Summary View, 17, 18  
 System Overview, 7

**T**

TCP/IP protocol, 8, 9

Tip, 12

Tooltray, 18, 26

Tooltray Icon, 18

Tooltray Menu, 18

**V**

View Tab, 22